



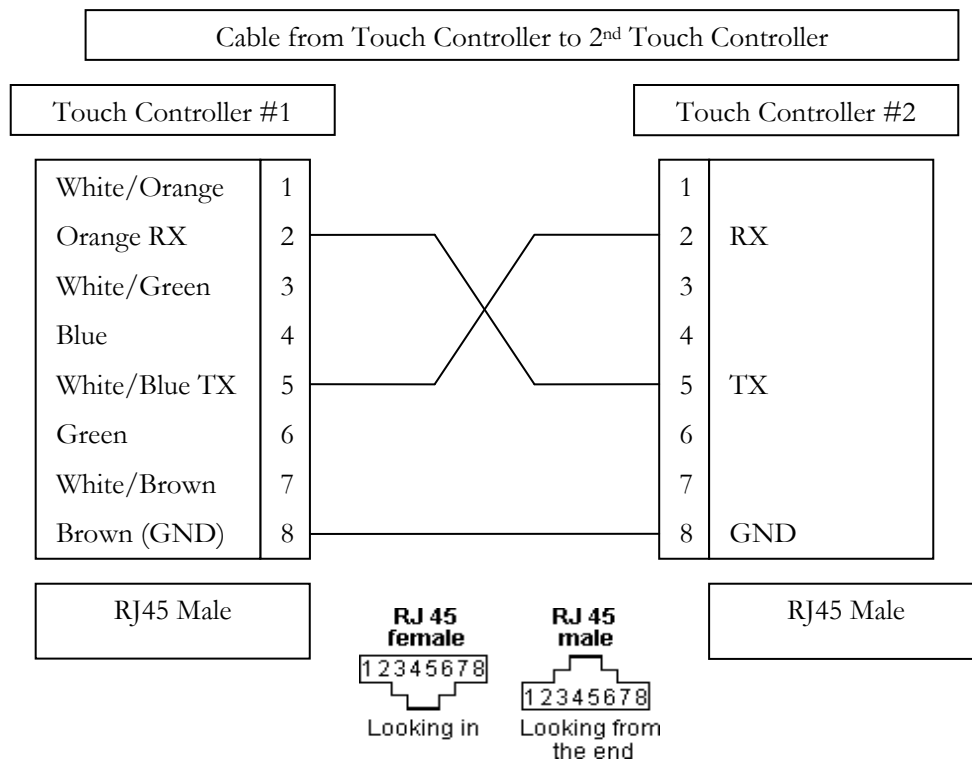

INTERNATIONAL SOUND CORPORATION

ADVS – TOUCH CONTROLLER WIRING DIAGRAM AND INSTALLATION NOTES

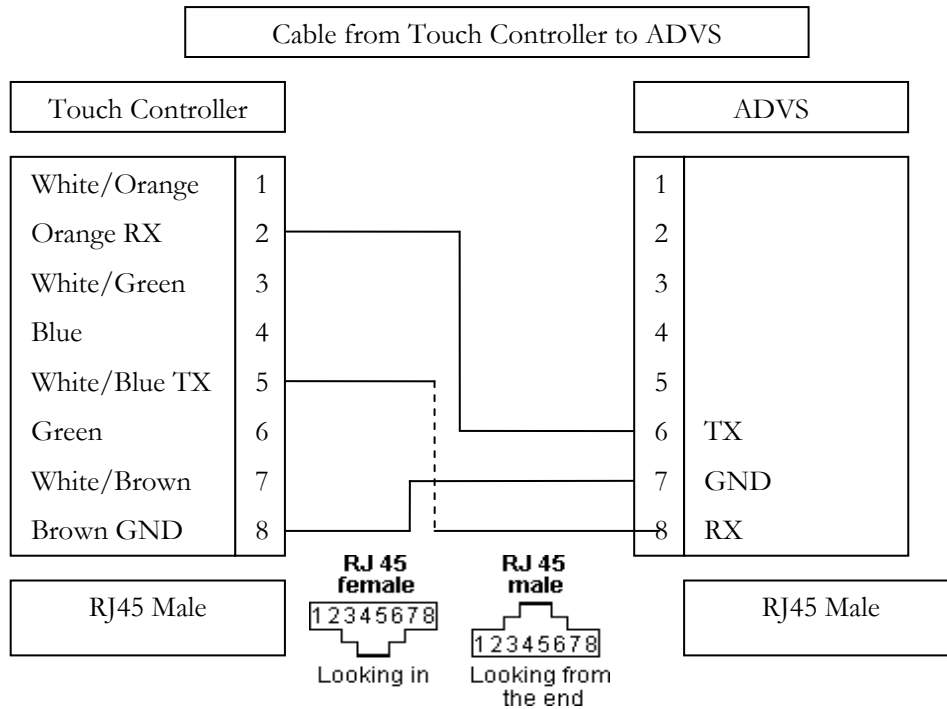

Installation Notes:

Standard Cat 5 Wiring is fine for the Production truck to the first ADVS.

DO NOT USE all 8 pins when wiring this. Only use the pins designated above. Using all 8 pins could cause problems in the operation.

Wire from the Touch Control (Use the middle RJ45 Jack) to the top ADVS to Slave In. From there you daisy chain from Slave out to Slave in below until the last unit.

On the last unit you MUST put another jumper from Slave out to Slave Terminate!!!!!!

All the short jumpers should have been included in the shipment.

When wiring the touch controller for the stewards stand, you can use standard RS232 practices with regards to distance. Any long distances above 250 Ft. will probably require the use of RS422 conversion gear.

The cable will be plugged into the 2nd communications port on the touch controller in the Production truck and will go to the Middle RJ45 jack on the Stewards controller.